

Flashback Arrestor Model 6103A and 6104B and Safety and Operating Instructions

Norms and Standards: ISO 5175; BAM EN 730-1, EN 730-2; ÖNORM EN730; BS 6158; EN 561; ISO 7289; UL MH16872; CGA; AS 4603; SABS.

Follow local national Safety Regulations.

Information: - For any questions, please call MATHESON at 215 641 2700.
Function: - Protection against creeping and sudden reverse flow of gas;

Flashbacks;Burnbacks

- Pressure build-up due to pressure surges

- Particulate contamination

Correct Usage: - Safety at the supply and tapping points, cylinder regulators and torches

- Use only in connection with given data per model number

Working pressure: - See data per model number

Incorrect Usage: - Application of other gases and/or pressures other than those indicated per model number

- Couplings are not cut-off valves; in the event of longer breaks or at the end of the working

day the gas source should be closed.

Warning:

 Δ Use only in the prescribed gas direction and do not exceed the maximum working pressure.

ΔUse only the prescribed gas. Do not connect the flashback arrestor to any other pressure recipients (e.g. directly to pressure gas cylinders 200 bar, 20,000 kPa, 2856 PSI) - DANGER TO LIFE!

CAUTION - Do **NOT** attempt to repair flashback arrestors. There are no user repairable parts.

 $\Delta \text{Only one}$ operating unit may be installed in conjunction with a flashback arrestor.

Δ Additional marking, stamping or engraving on the arrestor by the user is strictly forbidden, as this can cause damage.

△Once installed with a particular gas, do not repurpose flashback arrestor in another gas.

Assembly Instructions:

- ⇒ Before commencing, check visually that all connections are clean and undamaged.
- ⇒ When assembled, check for possible leaks by going up to maximum working pressure.
- ⇒ When using oxygen, all connections and the complete unit must be free from oil and grease
- ⇒ Fit with open-ended spanners for each connection

Maintenance:

- ⇒ The flashback arrestors and couplings must be tested at regular intervals by a trained and authorized person according to your local safety regulations. This means testing at least once per year (with couplings coupled and uncoupled being tested every six months) for gas leaks and gas reverse flow.
- ⇒ Where Acetylene generators are used, a gas purifier must be installed directly before the arrestor.
- ⇒ Where there is the possibility of condensed water in the acetylene delivery pipes/hoses, an adequate water filter should be installed before the arrestor.
- ⇒ Repairs of all sorts may only be carried out by the manufacturer or manufacturer's representative.
- ⇒ The dust filter at the inlet of the arrestor may be changed and/or cleaned by competent staff.

Trouble shooting:

- ⇒ **No gas flow**: check flow direction, operating pressure, gas cut-off valves, gas source, thermal and pressure cut-off valves.
- \Rightarrow Couplings and coupling pins can leak if they are damaged or dirty; therefore they should be checked regularly.
- ⇒ Gas return flow: replace device
- ⇒ External leakage: replace device

MINT-0250-XX REV. C Revised: 9/13/19



Flashback Arrestor Model 6103A and 6104B and Safety and Operating Instructions

Reset Instructions for 6103A:

- 1. In normal operating condition, the black control knob is toward the inlet, and the green ring is visible.
- 2. After a flashback or reverse flow over 0.5 bar, the control knob snaps toward the outlet end, hiding the green ring.
- 3. To reset, pull control knob toward inlet end, exposing the green ring.

Reset Instructions for 6104B:

After a flashback, the flash arrestor can be reused unless it has been damaged beyond normal working conditions



166 Keystone Drive Montgomeryville, PA 18936 800-828-4313 www.mathesongas.com

MINT-0250-XX REV. C

 $Copyright\ 2021\ Matheson\ Tri\text{-}Gas,\ Inc.\ All\ Rights\ Reserved.$

All contents of this document are subject to change without notice and do not represent a commitment on the part of Matheson Tri-Gas, Inc. Every effort is made to ensure the accuracy of this information. However, due to differences in actual and ongoing operational processes and product improvements and revisions, Matheson Tri-Gas, Inc. cannot guarantee the accuracy of this material, nor can it accept responsibility for errors or omissions. This document is intended to serve as a general orientation and cannot be relied upon for a specific operation. No warranties of any nature are extended by the information contained in these copyrighted materials.

All names, products, and services mentioned herein are the trademarks or registered trademarks of their respective organizations and are the sole property of their respective owners. Matheson and the Matheson logo are registered trademarks of Matheson Tri-Gas, Inc.

TERMS AND CONDITIONS OF SALE

https://shop.mathesongas.com/terms-and-conditions

MINT-0250-XX REV. C Revised: 9/13/19