

NEW
In2Go™
Inorganic Media

NANOCHEM® WeldAssure™ Gas Purifiers

Features and Benefits

- Low cost of ownership
- Wall mount frame – easy to install and operate
- Removes impurities to < 10 ppb (Dew Point = -150°F)
- **Enhances weld quality, strength and appearance**
- **Reduces weld porosity and oxidation**
- **Visual endpoint detection***
 - No guessing when to replace purifier canister
 - Color change in viewing window indicates 80% of purifier is spent
- **Increases weld electrode lifetime**
 - No need to stop welding to grind/replace electrode
- **Reduces weld rejects**
- **Built-in Bypass around purifier canister**
 - Enables purging of gas lines without purifier deactivation during cylinder changeout
- **Check valve at purifier outlet**
 - Prevents purifier deactivation from back diffusion of atmospheric air when gas flow is stopped
- Filters at canister inlet and outlet
- Operates at room temperature
- No power requirements
- **New NANOCHEM® In2Go™ Inorganic Media**
 - Prevents contamination from system upsets, such as air intrusion or connection of wrong gas cylinder
- **Field Replaceable Canister**
- **New Stainless Canisters can be refilled**
 - Savings over cost of replacement canister
 - Reduction in generation of solid waste

*NOTE: Endpoint detection not available for Ar/O₂ or Ar/CO₂ gas blends.

Specifications

- Flow rates up to **100 cfh** (47 slpm / 2.8 NM³/hr)
- Gases Purified (with **OMX™** or **In2Go™**):
 - Argon, helium, nitrogen, hydrogen, inerts and gas blends of these constituents (4N purity or better)
- Impurities removed (with **OMX™** or **In2Go™**):
 - Moisture, oxygen, carbon monoxide, carbon dioxide, nitrogen oxides, sulfur oxides, hydrogen sulfide, others

NOTE: OMX™-Plus also removes hydrocarbons. CO is more efficiently removed by In2Go™

- Gases Purified (with **MSA™** Media):
 - Argon / CO₂, Argon / O₂, Inerts / CO₂ blends
- Impurities removed (with **MSA™** media):
 - Moisture, hydrocarbons
- Maximum operating temperature – 65°C (170°F)
- Maximum operating pressure – 200 psig (1.48 MPa)
- Materials of Construction:
 - Canister (150 ml & 500 ml) – Aluminum 6061-T6
 - Canister (300 ml) – Stainless Steel, Type 304
 - Valves & Fittings – Naval Brass*

*Also available in Stainless Steel, Type 316

Connections

- Purifier: Swagelok 1/4" female NPT fittings
- Canister: Swagelok 1/4" male Compression fittings

Overview

NANOCHEM® WeldAssure™ purifiers provide purge and shield gas purification for welding applications. Weld gas impurities, such as moisture and oxygen, adversely affect weld quality. These impurities are present in gas cylinders, and can also be introduced through leaks in the line or during cylinder changes.

NANOCHEM® OMX™ and In2Go™ media react *chemically and irreversibly* with these impurities to deliver *consistently* pure gas to the weld site, improving weld quality. NANOCHEM® OMX™ resin also offers efficient removal of hydrocarbons, such as compressor oils, in the gas.

A new *inorganic* media, NANOCHEM® In2Go™ prevents piping system contamination in the event of a major system upset, such as significant air intrusion or from the accidental connection of an improper cylinder to the purifier. NANOCHEM® MSA™ media is *specifically* designed to purify Ar/O₂, Ar/CO₂ and other O₂, or CO₂ blends.

NANOCHEM® WeldAssure™ purifiers are an economical solution for GMAW (TIG) welding and other critical welding applications.

- Flow Rates up to 100 cfh (47 slpm)
- Available in 150 mL, 300 mL, and 500-mL sizes
- Easy to use canister *bypass* mode for canister changes and extended shutdowns
- Reliable endpoint detection to indicate when canister is spent
- Field replaceable canisters available
- 300 mL stainless canister can be refilled, enabling savings over purchase of spare canisters

Applications

GTAW (TIG), **GMAW** (MIG), **PAW** (Plasma) and **LBW** (Laser Beam) welding applications and welding overlays with GMAW and **PTAW** (Plasma Transferred Arc). Aerospace, nuclear, petrochemical, pharmaceutical, petroleum drilling, ship-building, and other manufacturing industries.

NOTE: NANOCHEM® L-Series™ and MegaShield™ Purifiers with all stainless construction recommended for higher flow rates and for very clean welding in semiconductor and pharmaceutical applications. Maximum flow rates: 150 slpm (~ 300 cfh) for L-Series and 1000 slpm (~ 2000 cfh) for MegaShield™ Purifiers.



Model WA-300
Stainless Steel canister

Model WA-500
Aluminum canister



MATHESON
TRI-GAS

ask. . . The Gas Professionals™

Performance Benefits with NANOCEM® Purifiers

Welding of Aluminum 6061 T3, GTAW Process



Without Purification
(Impurity Content = 40 ppm)
Surface Oxides, Porosity,
Poor Cleaning Action,
Poor Wetting
Rough Weld Surface




With Purification
No Porosity, Clean X-Rays
Good Cleaning Action,
Excellent Wetting,
Excellent Ductility
Very Smooth Surface

Welding of Titanium, PAW Process




Without Purification
Tungsten Deposits on
electrode (5/32", EWT-2) after
30 minutes.

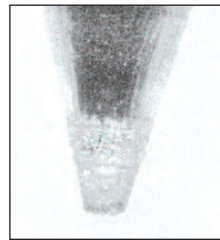

With Purification
Tungsten erosion at electrode
tip greatly reduced

Welding of Ferralium 255, GTAW Process

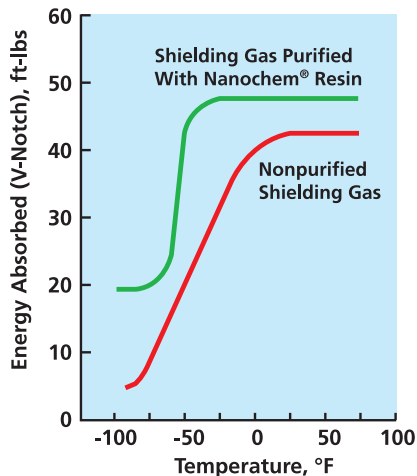

With Purification


Welds bright and shiny without oxidation or heat tints. Clean Radiographs – welds free of defects. Significant improvement in weld strength (Charpy V Notch impact energy) at lower temperatures. Improvements in Mils lateral expansion and percent ductile shear fracture.

Specifications are subject to change. Please check www.matheson-trigas.com for most current information.

MATHESON TRI-GAS and NANOCEM are registered trademarks of Matheson Tri-Gas Inc. OMX, In2Go, HCX, and MSA, L-Series, MegaShield are trademarks of Matheson Tri-Gas Inc. Swagelok is a trademark of Swagelok Companies, Solon, Ohio, USA

Equipment Technology Center

166 Keystone Drive
Montgomeryville, PA 18936
Tel: 800-828-4313 • Fax: 215-619-0458
Email: Info@matheson-trigas.com

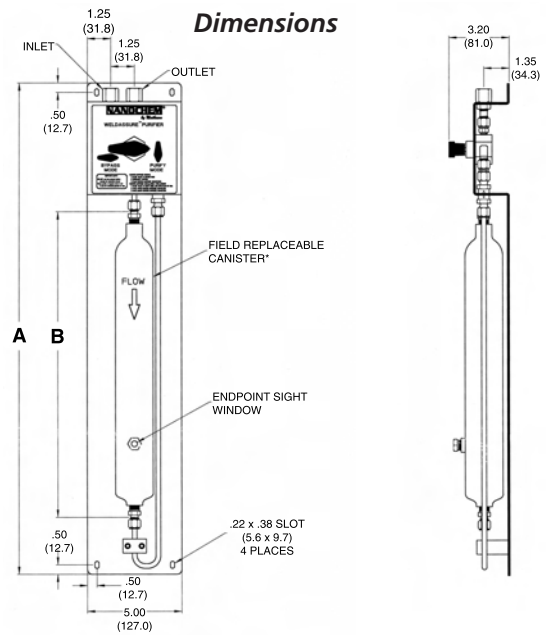

NOTE: Endpoint Sight Window not available for Ar/O₂ and Ar/CO₂ purifiers

Purifier Data	Purifier Model		
	WA-150	WA-300	WA-500
Media bed volume (mL)	150	300	500
NANOCEM® Media	OMX	In2Go	OMX
NANOCEM® Media for Ar / CO ₂ or Ar / O ₂ blends	MSA	MSA	MSA
Canister	Aluminum Al6061-T6	Stainless SS 304	Aluminum Al6061-T6
Valves & Fittings	Brass	Brass*	Brass
Maximum Flow (cfh argon)	30	60	100
(slpm argon)	14	28	47
(NM ₃ argon)	0.85	1.7	2.8
Dimension A / B (inches)	17 / 7	21 / 11.1	26 / 16.2
(mm)	432 / 178	533 / 282	660 / 411
Lifetime (approximate) [#]			
Number of cylinders purified	31	63	105

*Also available in Stainless Steel, Type 316

[#]Based upon argon of 99.998% purity ("Pre-purified" grade) containing 3 ppm O₂ and 10 ppm H₂O.

Cylinder size – ~ 280 ft³ (7.9 NM³) – Matheson 1A, BOC 200, Air Products B, Air Liquide 44, Praxair K.

NOTE: Additional impurities contributed by the gas delivery system can significantly reduce predicted lifetime.

CAUTION! Only NANOCEM® WeldAssure™ purifiers specifically labeled for CO₂ or O₂ applications can be used for purifying Ar/CO₂ and Ar/O₂ blends.

DO NOT use NANOCEM® WeldAssure™ purifiers containing NANOCEM® OMX™ or In2Go™ media with Ar/CO₂ or Ar/O₂ blends. The Media will get very hot. OMX™ media will break down causing hydrocarbon contamination.

Ar/CO₂ and Ar/O₂ blends are often used for GMAW (MIG) welding. Benefits include a stable arc, easier arc initiation, reduced arc wandering, and reduced arc spatter. For such applications, Matheson Tri-Gas offers WeldAssure™ purifiers containing NANOCEM® MSA™ media, specifically designed for CO₂ and O₂ blends.

Ar/CO₂ and Ar/O₂ blends, however, can result in deposition of oxides and carbides in the weld. Hence, for very clean GMAW welding, Matheson Tri-Gas recommends use of argon / helium blends. Use of a 75% Ar / 25% He blend and NANOCEM® OMX™ purification has been demonstrated to provide a very stable arc with greatly reduced weld spatter, fumes, and pyrotechnics. Weld quality of GMAW (MIG) welds with aluminum and Ferralium 255 (a duplex stainless steel) is excellent; porosity is eliminated and weld strength is as good as welds made with the GTAW (TIG) process.



**MATHESON
TRI•GAS**

ask. . .The Gas Professionals™